


NOTES:

1. USE DIP OR PVC SDR-21 PIPE IF CLEARANCE IS LESS THAN 3'. CENTER FULL JOINT OF PIPE ON STORM DRAIN LINE.
2. IF CLEARANCE IS LESS THAN 18", USE CONCRETE ENCASEMENT ON PIPE. USE POLYWRAP ON DUTILE IRON PIPE PRIOR TO POURING CONCRETE.

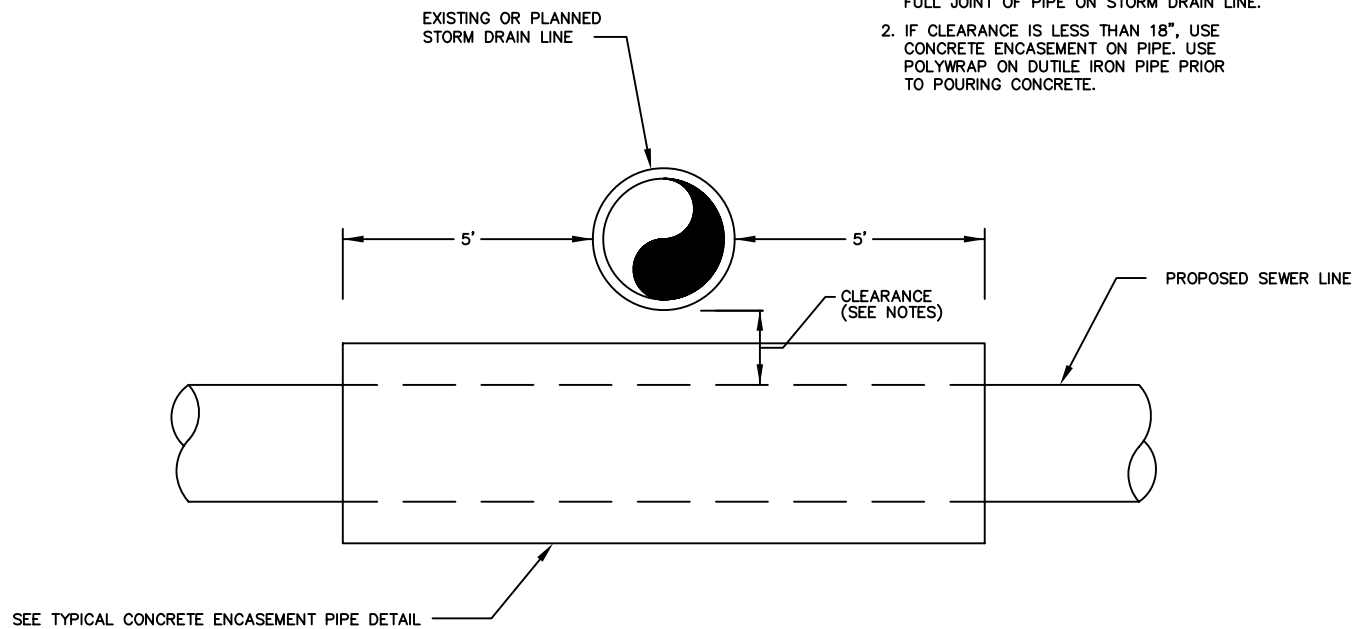

CROSSING UNDER STORM DRAIN LINE

CHARLESTON WATER SYSTEM		
CROSSING UNDER STORM DRAIN LINE		
APPROVED BY: CWS	DATE: MAR 2000	DRAWING NO. 45
SCALE: NTS	REVISED: FEB 2010	